

Cruise Control

- (1) Cruise control body with thumb screw & low tension spring
- (1) Short rubbing block for use with stock or comfort grips
- (1) Long rubbing block for use with chrome or billet grips
- (1) Allen head bolt for use with comfort grips
- (2) Spacer washers for use with comfort grips
- (1) High tension spring for a custom feel



Installation Instructions:




Step 1:
Remove the cable stay screw.



Step 2:
Select the proper rubbing block and install into the cruise block



Step 3 & 4:
Install the screw from step 1 into the counter sunk hole on the cruise block. Holding the cable stay in place, install the screw and cruise unit on to the switch housing.

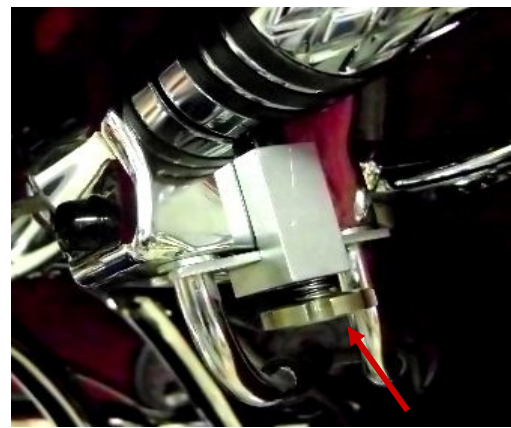

Tighten thumb screw to set tension on throttle.

*For comfort grips use above method but add 2 washers between cruise unit and cable stay. Use longer allen head bolt provided in place of original screw.