

# Cruise Control

- (1) Cruise control body with thumb screw & low tension spring
- (1) Short rubbing block for use with stock or comfort grips
- (1) Long rubbing block for use with chrome or billet grips
- (1) Allen head bolt for use with comfort grips
- (2) Spacer washers for use with comfort grips
- (1) High tension spring for a custom feel



## Installation Instructions:




**Step 1:**  
Remove the cable stay screw.



**Step 2:**  
Select the proper rubbing block and install into the cruise block



**Step 3 & 4:**  
Install the screw from step 1 into the counter sunk hole on the cruise block. Holding the cable stay in place, install the screw and cruise unit on to the switch housing.

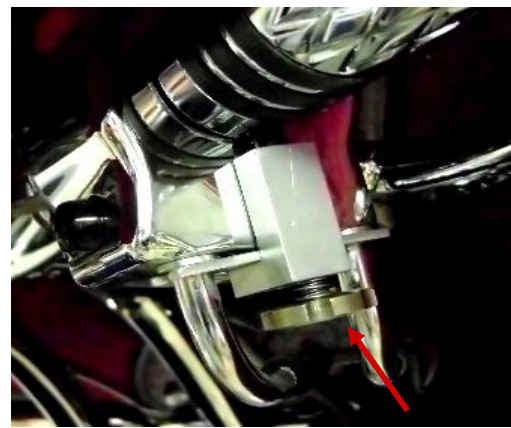

**Tighten thumb screw to set tension on throttle.**

\*For comfort grips use above method but add 2 washers between cruise unit and cable stay. Use longer allen head bolt provided in place of original screw.