



Installation Instructions:

1. Grind off the plastic on your ignition key. (Fig. 1)
2. Mix epoxy following instructions on the CB-200 packet.
3. Push epoxy down into slot on the aluminum Invis-A-Key. (Fig. 2)
4. Push key into slot making sure to keep it straight. Let dry a few hours. (Fig. 3)

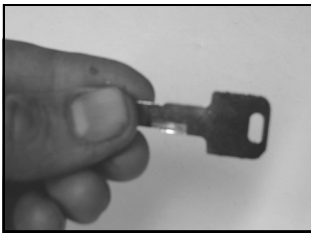


Fig. 1



Fig. 2

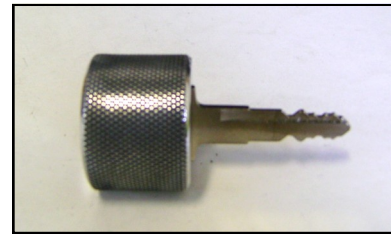


Fig. 3